

# How to check your firmware version

*Note: Firmware is the Operating System for the Beyonwiz PVR, similar to Windows on a PC. Updates are often released to improve functionality or resolve issues and are very simple to perform on a Beyonwiz PVR. Knowing what firmware version is currently installed on your PVR will make it much easier to update as new versions become available. As a Beyonwiz PVR owner you can download the latest firmware version and updates from [www.beyonwiz.com.au](http://www.beyonwiz.com.au)*

To find out which Firmware version is currently installed on your machine;

1. Press the **“Setup”** button on your Beyonwiz remote control
2. Use the ◀▶ Arrow keys on your Beyonwiz remote control to navigate to the **“System”** option shown as a pair of gears on the top menu bar
3. Use the ▲▼ Arrow keys on your Beyonwiz remote control to navigate to **“Firmware”** in the side menu and press the **“OK”** button



Figure 1: Firmware Information Window

4. Use the ▲▼ Arrow keys on your Beyonwiz remote control to navigate to **“Firmware Information”** in the main window
5. Press the **“OK”** button on your Beyonwiz remote control and the firmware information window (as shown in Figure 1) will be displayed. Shown next to **“Firmware Version”** is your current Beyonwiz firmware version for reference

You can find more detailed information on firmware and firmware updates on page 97 of your Beyonwiz Owner’s Manual or at [www.beyonwiz.com.au](http://www.beyonwiz.com.au)